


Sensor: Battery Voltage
Local Probe / FlexSCADA

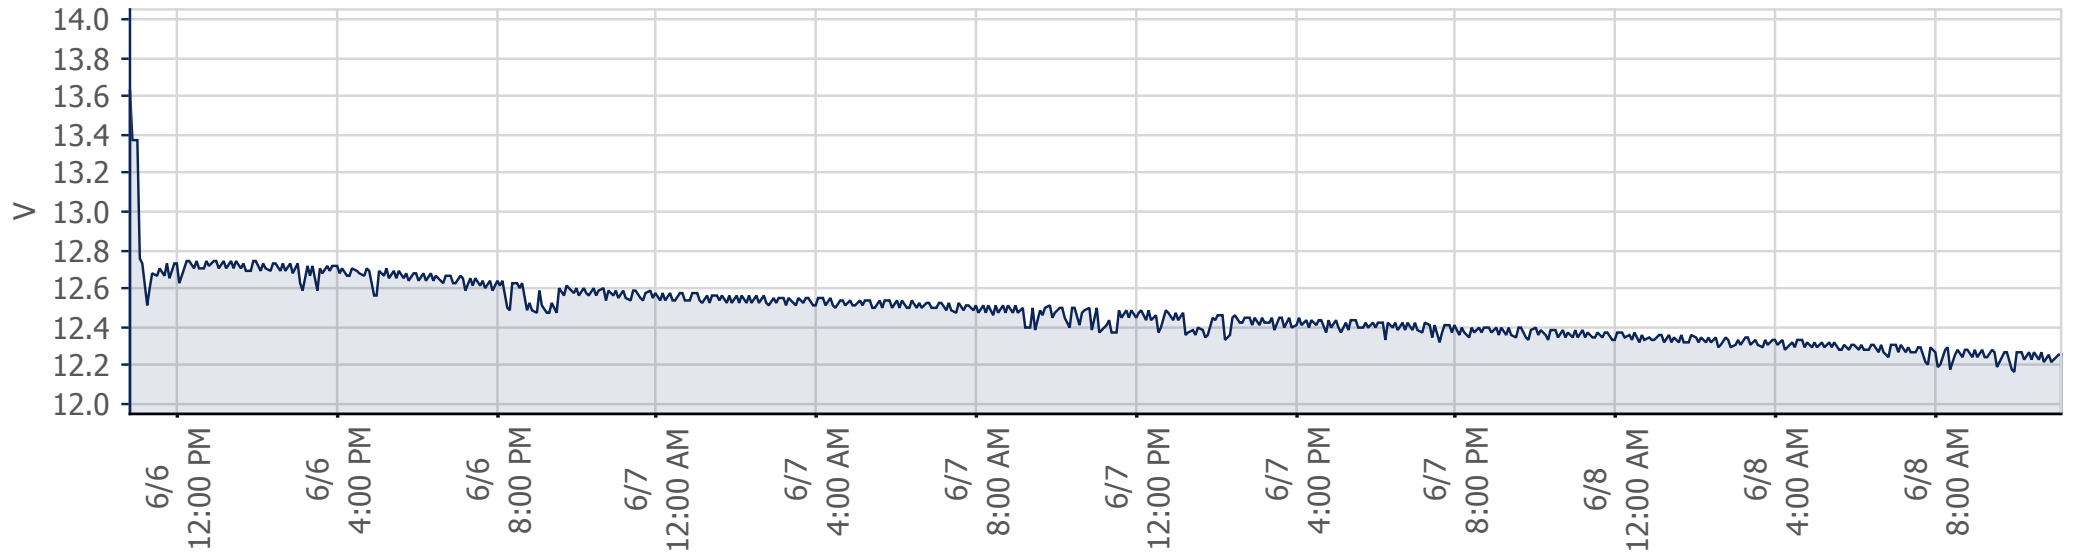

Sensor: Battery Current
Local Probe / FlexSCADA

